

# QUICK START GUIDE

UK

# CORDLESS TELEPHONE

 
Voxtel D100




# AEG

perfekt in form und funktion


P1

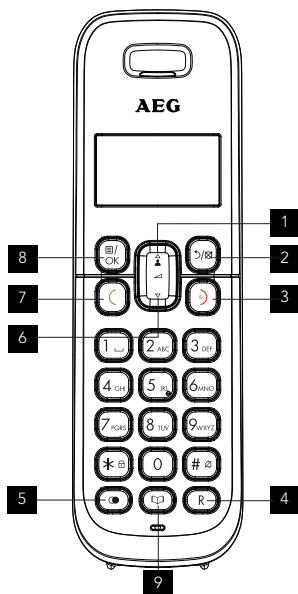


P2

 


P3

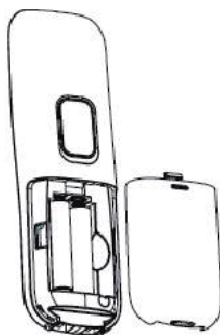 

P4

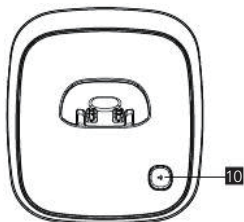 

P5

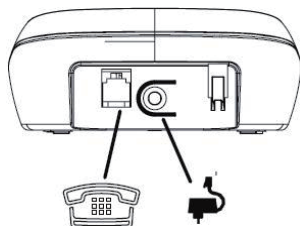 

## 1 BECAUSE WE CARE

Thank you for purchasing this product. This product has been designed and assembled with utmost care for you and the environment. This is why we supply this product with a quick installation guide to reduce the number of paper (pages) and therefor save trees to be cut for making this paper.

A full and detailed user guide with all the features described can be found on our website [www.aegtelephones.eu](http://www.aegtelephones.eu). Please download the full user guide in case you want to make use of all the advanced features of your product. To save the environment we ask you not to print this full user guide. Thank you for supporting us to protect our environment.

## 2 IMPORTANT SAFETY INSTRUCTIONS

When using your telephone, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

1. Read and understand all the instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug the power adapter from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
4. Keep your phone away from hot, humid conditions or strong sunlight and don't let it get wet or use this product near water (for example, near a bath tub , kitchen sink, swimming pool).
5. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.
6. Unplug this product from the wall outlet under the following conditions:
  - When the power supply cord or plug is damaged.
  - If the product does not operate normally by following the operating instructions.
  - If the product has been dropped and the cabinet has been damaged.
  - If the product exhibits a distinct change in performance.
7. NEVER use your phone outdoors during a thunderstorm-unplug the base from the telephone line and the mains socket when there are storms in your area. Damage caused by lightning is not covered by the guarantee.
8. Do not use the telephone to report a gas leak in the vicinity of the leak.
9. Use only the supplied NiMH (Nickel Metal Hydride) batteries!

10. The use of other battery types or non-rechargeable batteries/primary cells can be dangerous. These may cause interference and/or damage to the unit or surroundings. The manufacturer will not be held liable for damage arising from such non-compliance.
11. Do not use third party charging bays. Damage may be caused to the batteries.
12. Please ensure the batteries are inserted in the correct polarity.
13. Dispose of batteries safely. Do not immerse them in water, burn them, or put them where they could get punctured.

### 3 INTENDED USE

This telephone is intended to be connected to a public analogue telephone network or to an analogue extension of an compatible PBX system.

### 4 UNPACKING YOUR PHONE

In the box you will find:


 


- 1 Handset
- 1 Base station
- 1 Mains power adapter
- 1 Telephone line cord
- 2 Rechargeable batteries
- 1 User manual




 

Keep the packing materials in a safe place in case you later need to transport the device.



## 5 GETTING TO KNOW YOUR PHONE





### 5.1 Handset overview (see P1)





 







#		Meaning
1		<b>Up key</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the call list</li> <li>• In menu mode: press to scroll up the menu items</li> <li>• In phonebook list / redial list / call list: press to scroll up the list</li> <li>• During a call: press to increase the earpiece volume</li> <li>• During ringing: press to increase the ringer volume</li> </ul>
2		<b>Right soft key (clear/back/mute/intercom)</b> <ul style="list-style-type: none"> <li>• In main menu mode: press to go back to idle screen</li> <li>• In sub-menu mode: press to go back to previous level</li> <li>• In sub-menu mode: press and hold to go back to idle screen</li> <li>• In editing / predialling mode: press to clear a character/digit</li> <li>• In editing / predialling mode: press and hold to delete all the characters / digits</li> <li>• During a call: press to mute / unmute the microphone</li> <li>• In idle mode: press to intercom another handset</li> </ul>
3		<b>Off / hang up key</b> <ul style="list-style-type: none"> <li>• During a call: press to end a call and go back to idle screen</li> <li>• In menu / editing mode: press to go back to previous menu</li> <li>• In idle mode: press and hold to power off the handset</li> <li>• In idle mode (when the handset is powered off): press and hold to power on the handset</li> </ul>
4		<b>Flash key</b> <ul style="list-style-type: none"> <li>• In idle / predialling mode: press to insert a flash</li> <li>• During a call: press to generate flash signal</li> </ul>

5		<b>Redial key</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the redial list</li> </ul>
6		<b>Down key</b> <ul style="list-style-type: none"> <li>• In menu mode: press to scroll down the menu items</li> <li>• In phonebook list / call list: press to scroll down the list</li> <li>• During a call: press to decrease the earpiece volume</li> <li>• During ringing: press to decrease the ringer volume</li> </ul>
7		<b>Talk key</b> <ul style="list-style-type: none"> <li>• In idle/predialling mode: press to make a call</li> <li>• In redial list /call list/phonebook list: press to make a call to the displayed entry</li> <li>• During ringing: Press to answer a call</li> </ul>
8	 /OK	<b>Left soft key (menu/ok)</b> <ul style="list-style-type: none"> <li>• In idle mode: press to access the main menu</li> <li>• In sub-menu mode: press to confirm the selection</li> <li>• During a call: press to access Intercom/phonebook/redial list/call list</li> </ul>
9		<b>Phonebook key</b> <ul style="list-style-type: none"> <li>• Press to access the phonebook list</li> </ul>


## 5.2 Display icons and symbols (see P2)

The LCD display gives you information on the current status of the telephone.

	Meaning
	Steady when the handset is in range of the base. Flashes when out of range of the base or not registered to the base.
	Steady when an intercom call is in progress. Flashes when there is an incoming internal call.
	Indicates a call is in progress on that handset.
	Indicates that speakerphone is being used.

	Indicates that the handset ringer is switched off.
	Steady when an alarm is set. Flashes when the alarm is sounding.
	Indicates that the keypad is locked.
	Indicates when the battery is fully charged. Whole icon flashes when the battery is charging. Internal block icon flashes when the battery is in final charging stage.
	Indicates when the battery needs charging. Flashes when low battery power level is detected.
	Indicates when there are more characters or numbers in front of those being displayed.
	Indicates when there are more characters or numbers after those being displayed.
	Left soft key function. Press to access the main menu.
<b>OK</b>	Left soft key function. Press to confirm the current selection.
	Indicates new call in call list.
	Indicates more options available in lists, above or below.
 (INT)	Right soft key function. Press to start an intercom call.
	Right soft key function. Press to go back to the previous menu (back) level or cancel the current action.
<b>C</b>	Right soft key function. Press to cancel or mute/unmute the microphone during a call.

### 5.3 Base station (see P4)

#		Meaning
10		<b>Find</b> Press to locate all registered handset(s).

## 6 INSTALLATION

### 6.1 Connecting the base station (see P5)

- Plug the power supply and line cord into the base station.
- Plug the power adapter into a 100-240 Vac 50/60Hz mains socket and the line cord into your telephone line socket.

#### **Warning:**

Use only the provided adaptor, using other power supplies may cause a hazard or damage the phone.

Install the base unit in a position where the mains adapter plug will reach an easily accessible mains socket to unplug in case needed. Never try to lengthen the mains power cable.

#### **Note:**

The base unit needs mains power for normal operation, not just for charging the handset batteries.



### 6.2 Installing and charging the batteries (see P3)

- Place the 2 supplied batteries into the battery compartment with the polarity markings. Use only the NiMH rechargeable battery type provided with the telephone.
- Position the battery compartment cover over the batteries and slide up to click into place.
- Put the handset on the base and charge for 15 hours before using the handset for the first time.
  - >The handset will give a beep when it is properly placed on the base or charger.


## 7 TELEPHONE OPERATION

### 7.1 Make a call






#### 7.1.1 Preparatory dialling

- Enter the phone number and press  to connect to the line and dial the number.  
 >When entering the number, if you make a mistake, press "C"() to delete digits.

#### 7.1.2 Direct dialling

- Press  to connect to the line and then enter the phone number.





#### 7.1.3 Call from the phonebook

- Press , , OK to access the phonebook and press / to select the desired phonebook entry.
- Press  to dial out the selected phonebook entry.





#### Note:

The alphanumeric keys provide a short-cut to find entries beginning with the corresponding letters.

#### 7.1.4 Call from the call list (only available with caller display)

- Press  to access the call list and press / to select the desired call list entry.
- Press  to dial out the selected call list entry.

#### 7.1.5 Call from the redial list

- Press  to access the redial list and press / to select the desired redial number.
- Press  to dial out the selected redial number.

#### 7.1.6 Call timer

Your handset automatically times the duration of every call.

The call timer is displayed as soon as you answer a call or 15 seconds after dialling and remains on the screen for 5 seconds after the end of the call. It is shown in hours, minutes and seconds format (HH:MM:SS).

## 7.2 Answer a call


If the handset is not on the charging cradle:

- When the phone rings, press  to answer a call.

### Note:

If "AUTO ANSWER" is set to "ON", then lifting the handset off the base or charger will answer the call automatically and no keys need to be pressed.

## 7.3 End a call

- During a call press  to end the call.


### OR

- Put the handset on the base station or charger to end the call.


## 7.4 Adjust volume

There are 5 levels ("VOLUME 1" to "VOLUME 5") to choose from for each of the earpiece and speaker volumes.


During a call:

- Press  to select volume 1-5. The current setting is shown.  
>When you end the call, the setting will remain at the last selected level.

## 7.5 Turn off the handset ringer


In idle, press and hold **#** to turn off the handset ringer. The  icon is displayed on the LCD.

### Note:


The display will still flash the call icon  and show "CALL" or the caller display number, when there is an incoming call, even if the ringer is turned off. To turn the ringer back on, press and hold **#** again.

## 7.6 Turn on the keypad lock

You can lock the keypad so that it cannot be used accidentally while carrying it around.

- In idle, press and hold **\*** to turn on the keypad lock and the  icon will display.

### Note:

You can still use  to answer a call when the handset is ringing.  
To turn the keypad lock off, press and hold **\*** again.

## 7.7 Redial the last number




You can redial any of the 5 last numbers called. If you have stored a name in phonebook to go with the number, the name will be displayed instead. The most recent last number will display at the top of the redial list.

### 7.7.1 Redial a number from the redial list

- In idle mode, press  to access the redial list.

#### Note:


If the redial list entry shows a name, press # to view the number of this entry.


- Press / to browse the redial list.
- Press  to dial to the selected redial number.

#### Note:

If there are no numbers in the redial list, the display shows "EMPTY".

## 7.8 Find the handset

You can locate the handset by pressing the find key . All the handsets registered to the base will produce the paging tone and show "PAGING" on the display for 60 seconds.

You can stop the paging by pressing  on any handset or  on the base again.

#### Note:




If there is an incoming call during paging, the phone will ring with the incoming call instead of paging.

## 8 PRIVATE PHONEBOOK

Each handset can store up to 20 private phonebook entries with names and numbers. Each phonebook entry can have a maximum of 20 digits for the phone number and 12 characters for the name. You can also select different ringtones for your phonebook entries. (Note: the different ringtones only play when you receive a call if you subscribe to caller display and the incoming number matches the stored number.) Phonebook entries are stored alphabetically by name.




### 8.1 Add a new phonebook entry

In idle:

- Press  and  to select "PHONEBOOK" and then press OK to access the phonebook.
- Press OK to show "ADD".
- Press OK and then enter the name.
- Press OK and then enter the number.
- Press OK and  to select the desired ringtone for your phonebook entry.
- Press OK to store the phonebook entry.






### 8.2 Search for a phonebook entry

In idle:

- Press  and  to select "PHONEBOOK" and then press OK to access the phonebook.
- Enter the first letter of the name using the alphanumeric keys (e.g. if it begins with C, press the 2 key three times) and then  to scroll to the entry you want.

### 8.3 Edit a phonebook entry


In idle:

- Press  and  to select "PHONEBOOK" and then press OK to access the phonebook.
- Press  to select the desired phonebook entry.
- Press OK and  to select "EDIT".
- Press OK to display the current name.
- Edit the name and press OK.
- Edit the number and press OK.
- Press  to select the ringtone and press OK to confirm.



## 8.4 Delete a phonebook entry

In idle:

- Press  and  $\Delta/\nabla$  to select "PHONEBOOK" and then press OK to access the phonebook.
- Press  $\Delta/\nabla$  to select the desired phonebook entry.
- Press OK and  $\Delta/\nabla$  to select "DELETE".
- Press OK to confirm, and the entry will be deleted.

## 9 CALLER DISPLAY (NETWORK DEPENDENT)




This feature is available if you have subscribed to the calling Line Identification service with your network service provider. Your phone can store up to 10 received calls with date/time information in the call list. The number will be shown on the handset display when the phone is ringing. If the number matches with one of the entries in your private phonebook, the caller's name stored in the private phonebook will be displayed alternately with the number, and the handset will ring with the ringtone associated with that phonebook entry.

If the call is from someone who withheld their number, "WITHHELD" will display.




If the call is from someone whose number is unavailable, e.g. an international call or from a private exchange, "OUT OF AREA" will display. If you've got new caller display records, the handset will display "X NEW CALLS" in standby mode. The New calls indication will remain until all the new call records have been viewed on that handset.

### 9.1 View the call list

All received calls are saved in the call list with the latest call at the top of the list. When the call list is full, the oldest call will be replaced by a new call. Any unanswered calls which have not been viewed are marked with a ★ icon at the centre of the bottom line of the display.





- Press  to access the call list.
- OR Press  and  $\Delta/\nabla$  to show "CALL LIST", then press OK.
- Press  $\Delta/\nabla$  to select the desired entry.
- Press # to view the caller's number if applicable.
- Press ,  $\Delta/\nabla$  to show "DETAILS", and then OK to display the date and time of the call.
- Press OK to go back to the previous screen.

## 9.2 Delete an entry in the call list

- Follow steps 1 and 2 in section "9.1 View the call list".
- Press  and  to select "DELETE".
- Press  to confirm.

## 9.3 Delete all call list entries








Follow steps 1 and 2 in section "9.1 View the call list".

- Press  and  to select "DELETE ALL".
  - Press  to display "CONFIRM?".
  - Press  to confirm.
- > All entries will be deleted and the display will show "EMPTY".

# 10 PHONE SETTINGS








Your phone comes with a selection of settings that you can change to personalise your phone the way you like it to work.

## 10.1 Set the handset language

- Press  and  to select "HS SETTINGS".
- Press  and  to select "LANGUAGE".
- Press  and  to select the desired language.
- Press  to confirm.

## 10.2 Base Settings








### 10.2.1 Set the base ringer melody

- Press  and  to select "BS SETTINGS".
- Press  and  to select "BS RINGER".
- Press  and  to select the desired melody you want from a choice of 5.
- Press  to confirm.

### Note:

The respective ringer melody will be played while browsing the melody list.

### 10.2.2 Set the ringer volume

- Press  and  to select "BS SETTINGS".
- Press  and  to select "RING VOLUME".
- Press  and  to select the desired ringer volume (a total of 6 ringer volume levels including "VOLUME OFF").
- Press  to confirm.

#### Note:

The respective ringer volume will be played during your selection.

## 10.3 Handset registration






### Important:


When you purchase your phone, all handsets are already registered to your base, so you do not need to register them.


Handset registration is only necessary when you buy extra handsets or if a handset has become faulty.

You can register additional handsets to have up to five handsets per base unit, with each handset's number (1 to 5) shown on its display. (Note: each handset can only be registered to one base.)

To register a new handset to your base:

- Press and hold  on the base station for more than five seconds, to put the base station into registration mode. It will stay in registration mode for about 1 minute, so the following handset sequence must be completed within this time.
- Press  and  to select "REGISTRATION".
- Press  to display "PIN?-----".
- Enter the 4-digit system PIN (default 0000).
- Press  to confirm, and the display will show "SEARCHING".

If the handset registration is successful, you will hear a confirmation tone and the  will stop flashing.

The handset will automatically be allocated the next available handset number. This handset number is shown in the handset display in standby mode. If the handset registration is unsuccessful, the  will still flash.

## 11 GUARANTEE AND SERVICE

The phone is guaranteed for 24 months from the date of purchase shown on your sales receipt. This guarantee does not cover any faults or defects caused by accidents, misuse, fair wear and tear, neglect, faults on the telephone line, lightning, tampering with the equipment, or any attempt at adjustment or repair other than through approved agents.

**Please keep your sales (till) receipt this is your proof of guarantee.**

### 11.1 While the unit is under Guarantee

- Disconnect the base unit from the telephone line and the mains electricity supply.
- Pack up all parts of your phone system, using the original package.
- Return the unit to the shop where you bought it, making sure you take your sales receipt.
- Remember to include the mains adapter.

### 11.2 After the Guarantee has expired

If the unit is no longer under Guarantee, contact us via [www.aegtelephones.eu](http://www.aegtelephones.eu)

This product works with rechargeable batteries only. If you put nonrechargeable batteries in the handset and place it on the base, the handset will be damaged and this is NOT covered under the warranty conditions.

## 12 TECHNICAL DETAILS

<b>Standard</b>	Digital Enhanced Cordless Telecommunication (DECT)
	1.88 to 1.9 GHz (bandwidth = 20 MHz)
<b>Channel bandwidth</b>	1.728 MHz
<b>Operating range</b>	Up to 300m outdoors; Up to 50m indoors
<b>Operating time</b>	Standby: 100 hours, Talking: 10 hours Battery charge time: 15 hours
<b>Temperature range</b>	Operating 0° C to 40° C, Storage -20° C to 60° C

**Electrical power**

Base unit:

VTPL - VT04EEU06045 / VT04EUK06045

input 100-240VAC 50/60Hz 150mA,

output 6VDC 450mA

## 13 CE DECLARATION

This product is in compliance with the essential requirements and other relevant provisions of the R&TTE directive 1999/5/EC.

The Declaration of conformity can be found on: [www.aegtelephones.eu](http://www.aegtelephones.eu)

## 14 DISPOSAL OF THE DEVICE (ENVIRONMENT)

At the end of the product lifecycle, you should not throw this product into the normal household garbage but bring the product to a collection point for the recycling of electrical and electronic equipment. The symbol on the product, user guide and/or box indicate this. Some of the product materials can be re-used if you bring them to a recycling point. By reusing some parts or raw materials from used products you make an important contribution to the protection of the environment. Please contact your local authorities in case you need more information on the collection points in your area.

**Batteries must be removed before disposing of the device. Dispose of the batteries in an environmental manner according to your country regulations.**

## 15 CLEANING AND CARE

Do not clean any part of your phone with benzene, thinners or other solvent chemicals as this may cause permanent damage which is not covered by the Guarantee.

**When necessary, clean it with a damp cloth.**

Keep your phone system away from hot, humid conditions or strong sunlight, and don't let it get wet.

© 2013 Binatone Electronics International Limited

All rights reserved

Subject to availability. Rights of modification reserved.

AEG is a registered trademark used under license from AB Electrolux (publ)

[www.aegtelephones.eu](http://www.aegtelephones.eu)

